

FR-1 | 512 Hz Frequency Receiver

The antenna is what picks up the signal from the transmitter. It will also point you in the right direction of the line.



The blue FTP-8, 512 Hertz flushable transmitters are a great companion with the FR-1 receiver.

The sensitivity knob is also used to turn the receiver on and off. It allows you to control the amount of signal you see on the meter and hear from the speaker.

Meter indicates the strength of the peak signal to the right and the null signal to the left.

The near/far switch is to help you further control the amount of sensitivity. As you begin a locate you are furthest away. Position the toggle switch to far and as you hon in on the transmitter switch to near to lower the sensitivity.

The red button lets you test your battery strength. Press and hold down the button when the receiver is on. If the needle is in the green your batteries are good.

The speaker allows you to hear the transmitters signal.

Headphone Jack can be used during a locate on a noisy site.

On the back side is the battery compartment. Slide the cover off and replace with 6 AA alkaline batteries.

