


How to Use Prototek Spring Carriers



Step 1: To unscrew black delrin end, hold spring in one hand and place the set screw on the spanner wrench up against the end of the top spring. With the spanner wrench leaning against a hard surface turn the spring slightly to release tension and with the other hand turn the delrin until it comes off. If you don't release the tension of the spring the delrin end will stay locked in place.

Step 2: Put your battery in your sonde, slip it into the spring carrier and screw the delrin end back on tight. Attach to your push rodder or sewer machine and begin your locate. The gaps in the coil will allow for full signal strength.

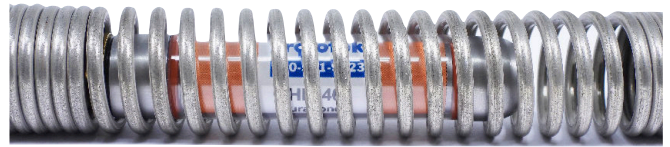

Step 3: When finished with your locate repeat step one and remove battery from transmitter.

Prototek Spring Carriers are made to work with Prototek DuraSonde Transmitters. Off brand transmitters may not fit inside spring.

Prototek Spring Carrier

